

M4 + M4 - 5A

Remote and controller

Safety Instruction and Warning

WARNING:

READ CAREFULLY BEFORE INSTALLING.

Installation should only be conducted by a qualified electrician in accordance with NEC and any relevant local building codes.

Risk of fire or electric shock. Fixture installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

Be certain electrical power is OFF before and during installation and maintenance.

Fixtures must be connected to a wiring system with an equipment-grounding conductor.


Make sure the supply voltage is the same as the rated luminaire Fixtures voltage.

Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.

Installation Instruction

Step 1

Insert the Black wire (Negative) and Red wire (Positive) from the power supply and secure the screw.

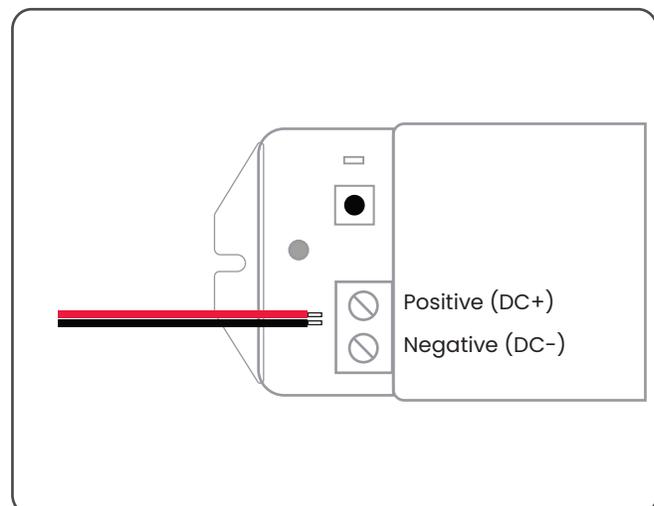


M4 + M4 - 5A

Remote and controller


Step 2

Turn on the power supply. The red power indicator LED on the controller will start flashing that shows it is getting power.

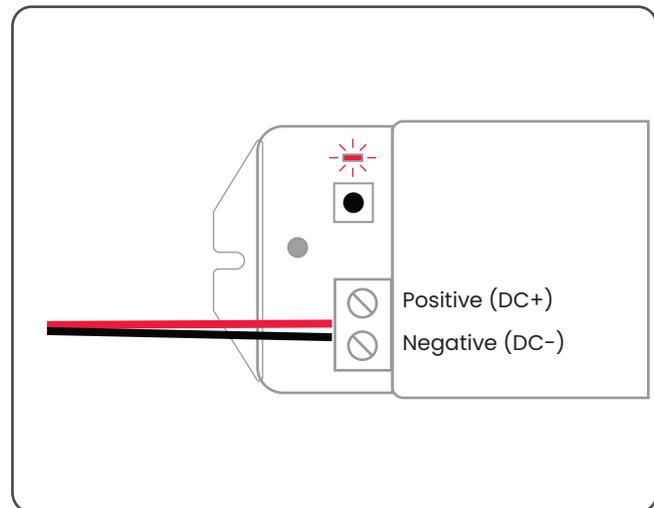

Step 3

Insert the wires from LED strip into correct channels and secure the screw.

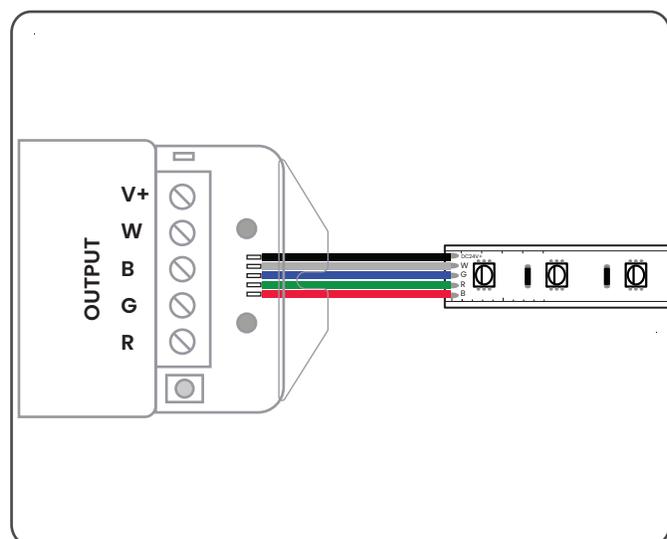


M4 + M4 - 5A

Remote and controller


Step 4

Make sure there is a battery in the remote. Press the black Sync button on the receiver then press any button on the remote. Now the remote is synced.

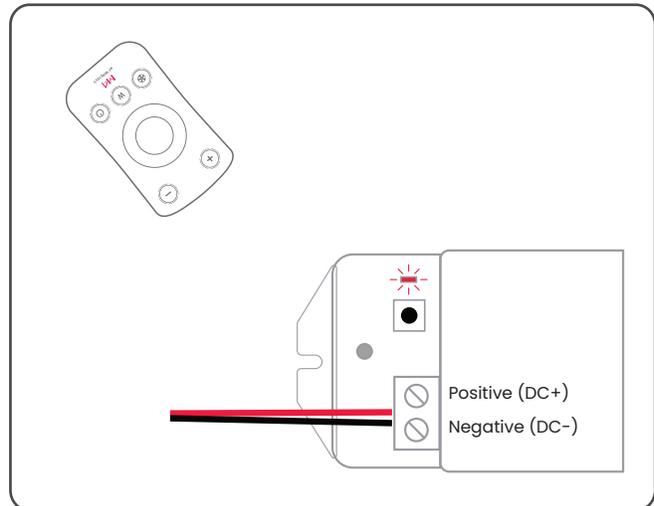

Step 5

Turn on the LED strip.

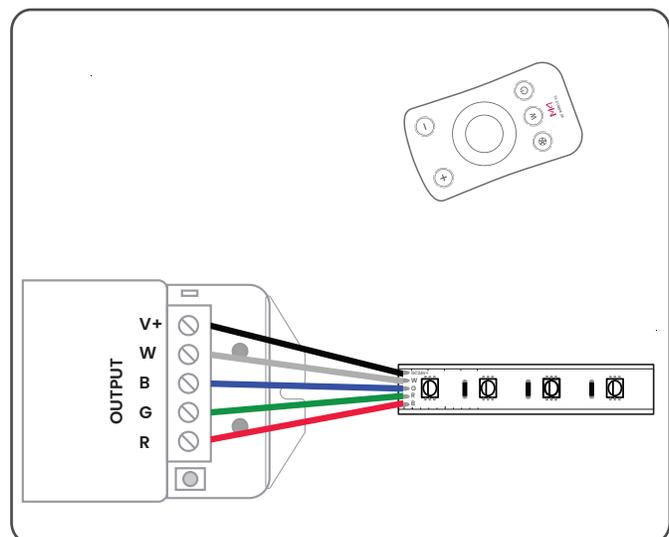



M4 + M4 - 5A

Remote and controller




M4 + M4 - 5A

Remote and controller

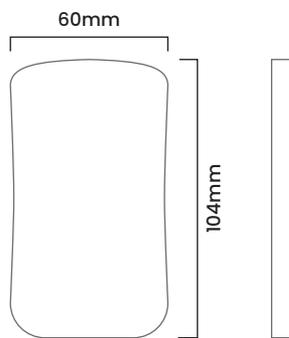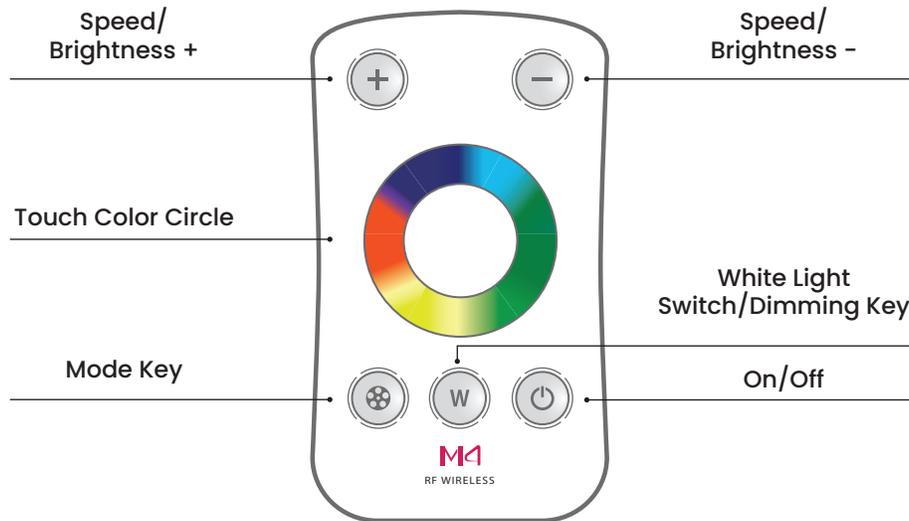

Remote

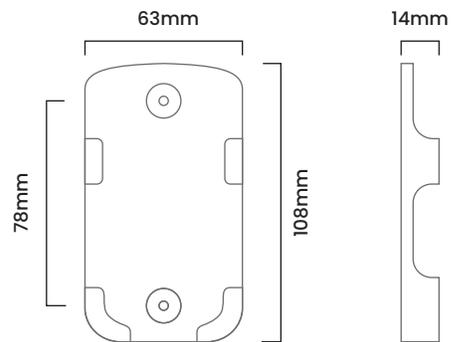

Remote-holder

