

# M4 + M4 - 5A

## Remote and controller

### Safety Instruction and Warning

WARNING:

#### READ CAREFULLY BEFORE INSTALLING.

Installation should only be performed by a qualified electrician in accordance with NEC and all applicable local building codes.

Risk of fire or electric shock. Fixture installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.


Ensure that electrical power is turned OFF before and during installation or maintenance.

Fixtures must be connected to a wiring system that includes an equipment-grounding conductor.

Ensure that the supply voltage matches the rated voltage of the luminaire fixture.

Wear gloves and safety glasses at all times when removing the luminaire from the carton, installing, servicing, or performing maintenance.


### Diagram

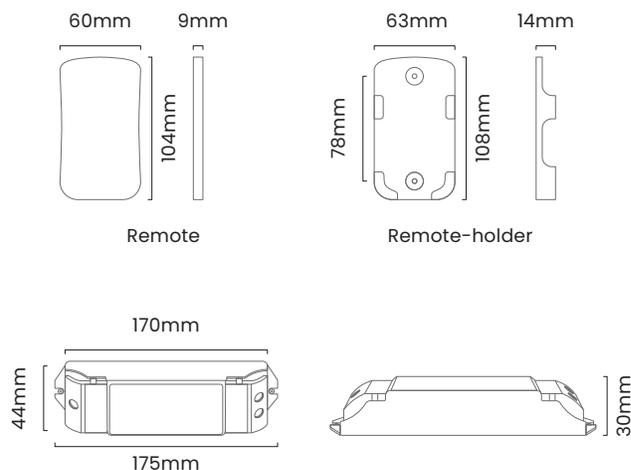

### Description

Diffusion M4+M4-5A Remote & Controller is capable of controlling up to 10 different controllers at once at a distance of up to 50m away (unobstructed distance).


### Remote and Controller

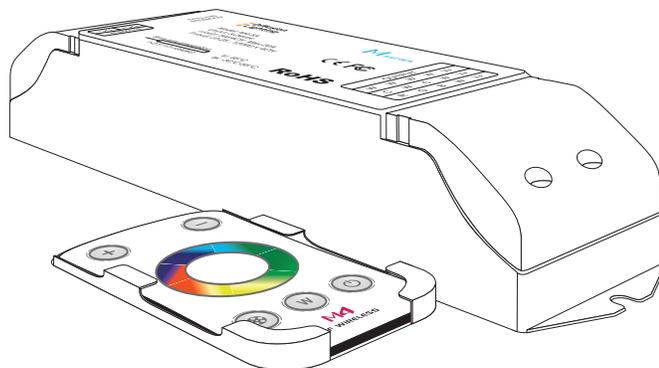

# M4 + M4 - 5A


## Remote and controller

### Remote Functions

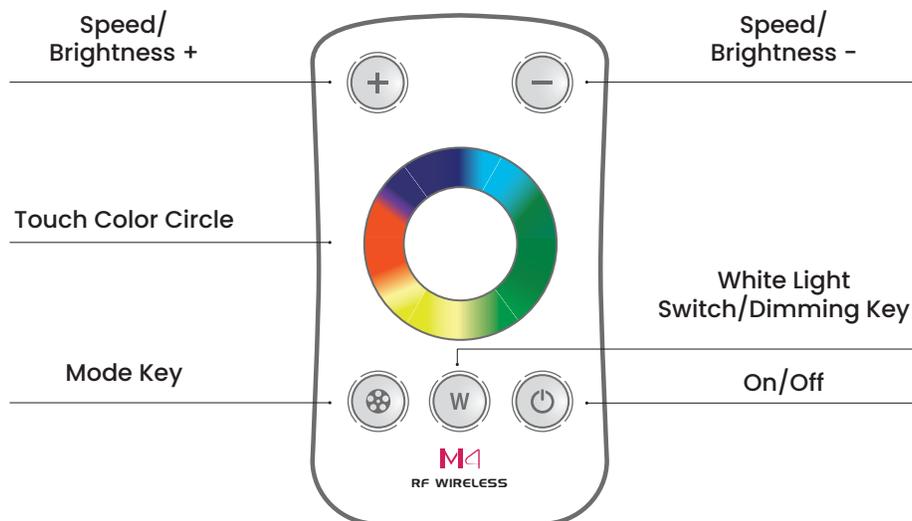

### Step 1

Insert the Black wire (Negative) and Red wire (Positive) from the power supply into their respective terminals and tighten each terminal screw.

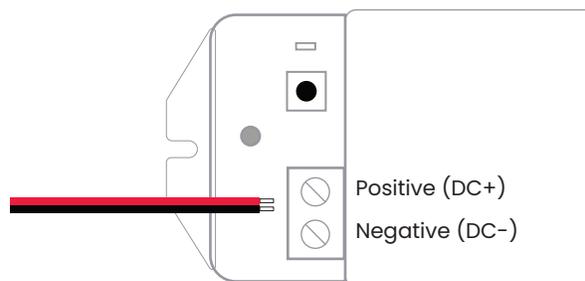


# M4 + M4 - 5A

## Remote and controller


### Step 2

Turn on the power supply. The red power indicator LED on the controller will begin flashing, confirming it's receiving power.

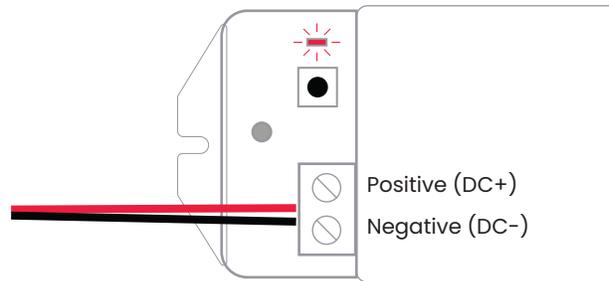

### Step 3

Insert the wires from the LED strip into the correct channels, then securely tighten each terminal screw.

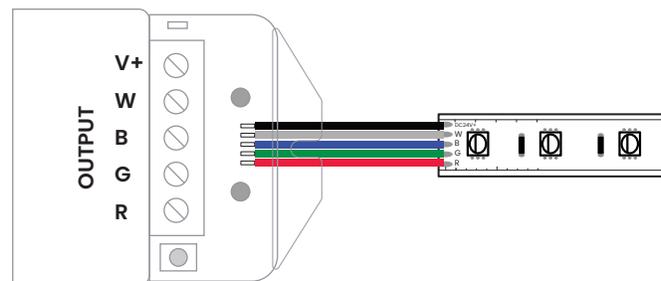


# M4 + M4 - 5A

## Remote and controller

### Step 4

First, confirm there's a battery in the remote.

Next, press the black Sync button on the receiver, then press any button on the remote. The remote should now be synced.

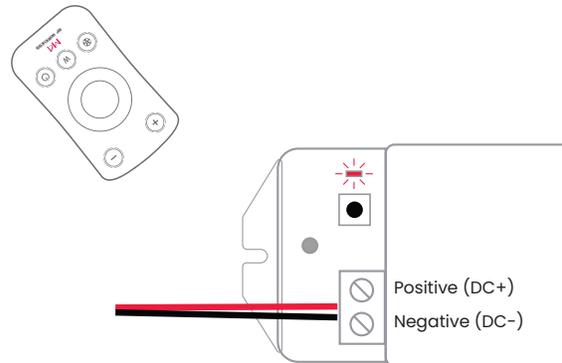

### Step 5

Turn on the LED Ribbon.

