Safety Instruction and Warning

WARNING:

READ CAREFULLY BEFORE INSTALLING.

Installation should only be conducted by a qualified electrician in accordance with NEC and any relevant local building codes.

Risk of fire or electric shock. Fixture installation requires knowledge of luminaires electrical systems. If not qualifies, do not attampt installation. Contact a qualified electrician.


Be certain electrical power is OFF before and during installation and maintenance.

Fixtures must be connected to a wiring system with an equipment-grounding conductor.

Make sure the supply voltage is the same as the rated luminaire Fixtures voltage.

Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.

Diagram

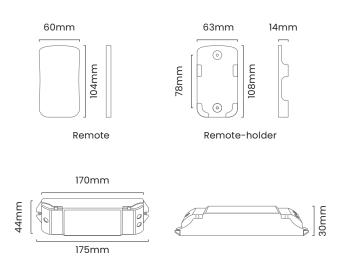

Description

Lorem ipsum dolor sit amet, consectetuer adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore magna aliquam erat volutpat. Ut wisi enim ad minim veniam, quis nostrud exerci tation

Remote and Controller











Installation Types

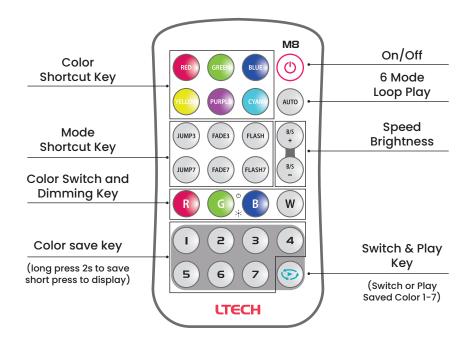

Step 1

Insert the Black wire (Negative) and Red wire (Positive) from the power supply and tighten each terminal screw.

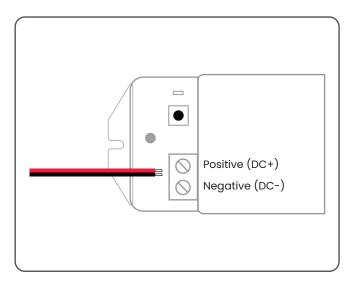






M8 + M4 - 5A

Remote and controller


Step 2

Turn on the power supply. The red power indicator LED on the controller will start flashing that shows it is getting power.

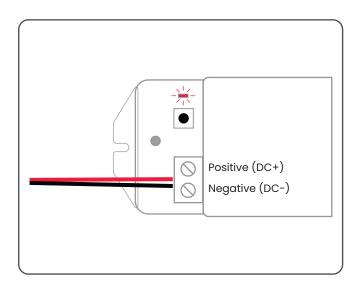

Step 3

Insert the wires from LED strip into correct channels and secure each terminal screw.

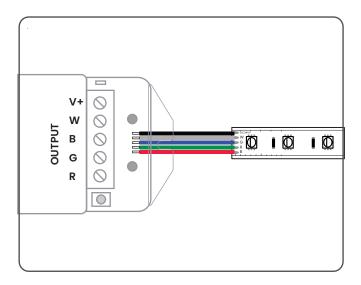






M8 + M4 - 5A

Remote and controller


Step 4

Make sure there is a battery in the remote. Press the black Sync button on the receiver then press any button on the remote. Now the remote is synced.

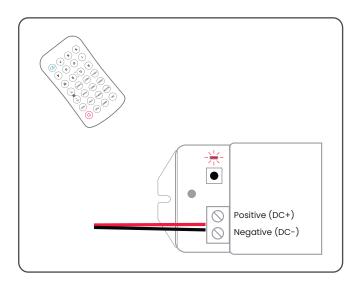

Step 5

Turn on the LED strip.

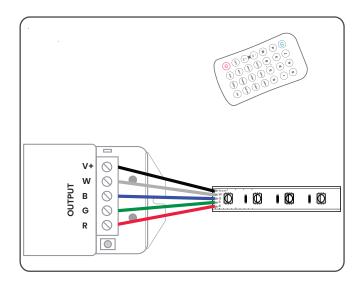







Step 6

There are six buttons on the remote, Red, Green, Blue, Yellow, Purple and Cyan. Use B/S+ or B/S- to control the brightness for those colors.

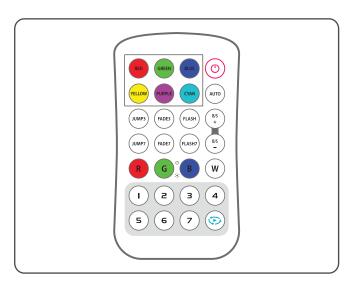

Step 7

There are six buttons on the remote, Jump3, Fade3, Flash, Jump7, Fade7, Flash7. Use B/S+ or B/S- to control speed and or brightness for those colors.

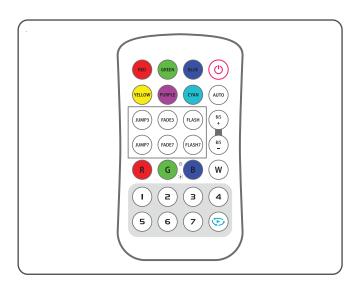





Step 8

To pre-set, select the desired color and brightness then press and hold any number (1-7) for 2 seconds. Repeat for all buttons (1-7).

Confirm each color worked by pressing the number. If the color doesn't show what you selected, try again.

Once all 7 colors are programmed, correctly press the continuous button beside the number 7 to have it cycle through all the colors (note: all seven colors need to be programmed.)

