


# **Triac Dimming LED Driver**

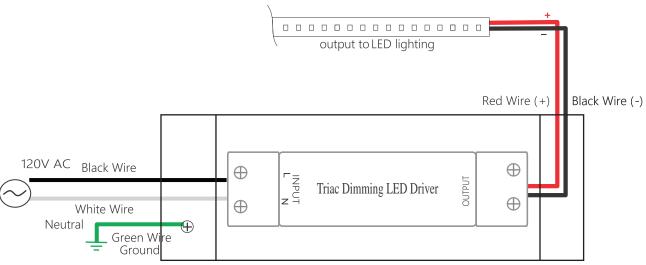

Green wire / Enclosure wire must be grounded




#### SAFETY INSTRUCTION AND WARNING

- Installation should only be conducted by a qualified electrician in accordance with NEC and any relevant local building codes.
- Risk of fire or electric shock. Fixture installation requires knowledge of luminaires electrical systems.
- Be certain electrical power is OFF before and during installation and maintenance.
- Make sure the supply voltage is the same as the rated luminaire fixture voltage,
- Wear gloves and safety glasses at all times.






#### Installation

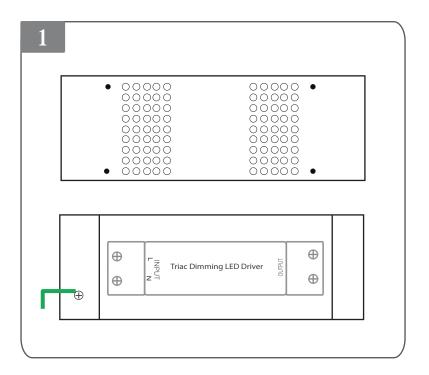

# Step 1.


Unscrew and remove the enclosure's cover and remove knockouts for input and output.

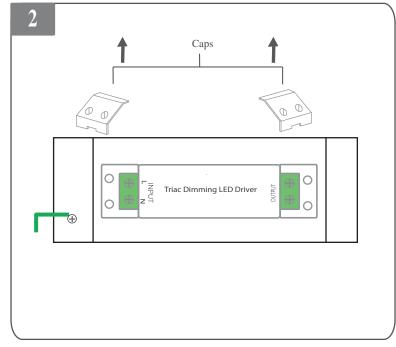

## Step 2.


Remove the caps on the drivers to be able to see the green color terminals.



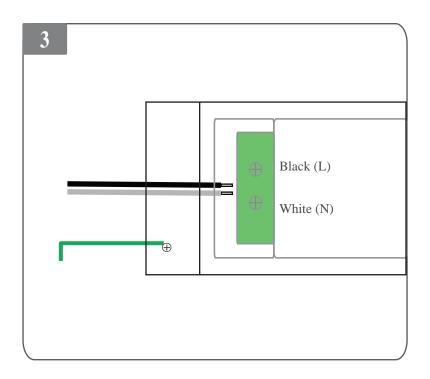

# Step 3.


Insert the Black wire (Line) and White wire (Neutral) from the panel into the driver and secure the screw.

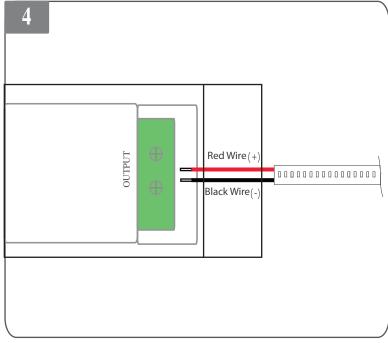

## Step 4.


Fasten the wires from the LED strip into the output.



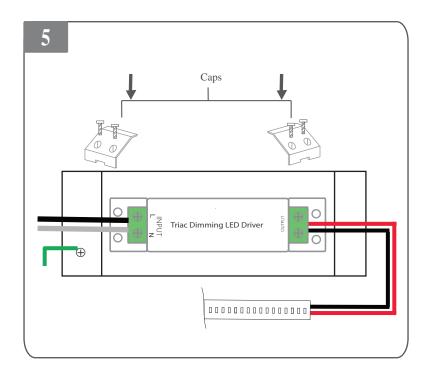

## Step 5.


Fasten the caps on the driver.

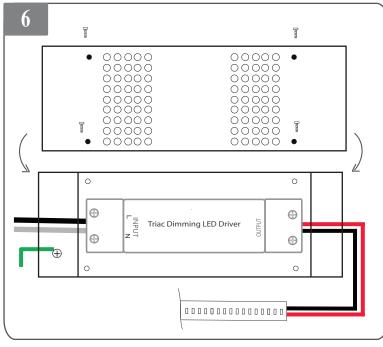

#### Step 6.

Replace and screw down the enclosure's cover.



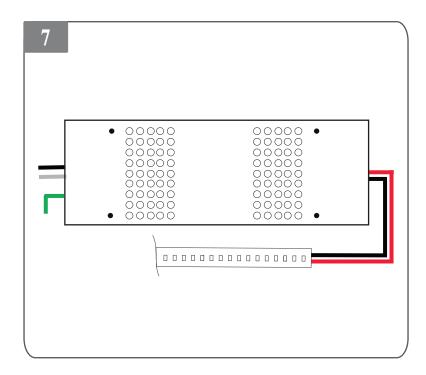

**Step 7.** Finished!