#### Safety Instruction and Warning

WARNING:

#### READ CAREFULLY BEFORE INSTALLING.

Installation should only be conducted by a qualified electrician in accordance with NEC and any relevant local building codes.

Risk of fire or electric shock. Fixture installation requires knowledge of luminaires electrical systems. If not qualifies, do not attampt installation. Contact a qualified electrician.

Be certain electrical power is OFF before and during installation and maintenance.

Fixtures must be connected to a wiring system with an equipment-grounding conductor.

Make sure the supply voltage is the same as the rated luminaire Fixtures voltage.

Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.


### Description

Diffusion Perch Series is a full 360 degree illumination with no shadows throughout. It comes up to 9w/ft approx 900 lumens per foot.

#### Installation Instruction

#### Step 1

Take the two channels labelled A. There is a small black connector with red and black wires on each channel and also there is a piece of double-side tape on the end caps (Joiners).

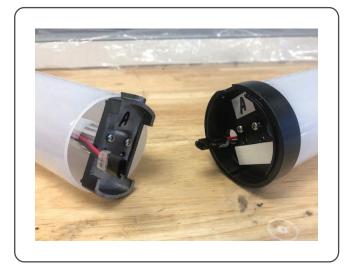






## Step 2

Push the connectors together and make sure they are tightly attached.





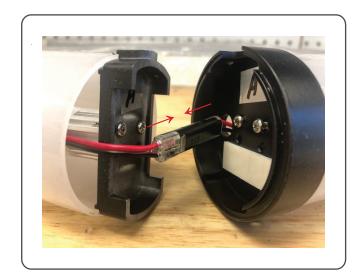

## Step 3

Pull off the double side tape backing and attach the connector.





## **Shop Drawing**



#### **Perch Models**










## Step 4

Slide the Joiners together and make sure there is no gap between the two pieces of the joiner.

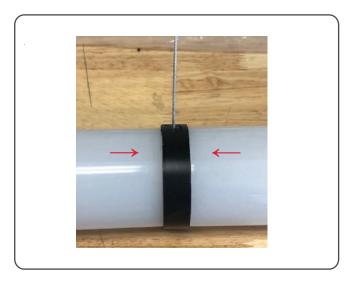

## Step 5


Use the provided set screw to fasten the joiners from the top.





## Step 6

Also fasten the joiner with set screws from the bottom.

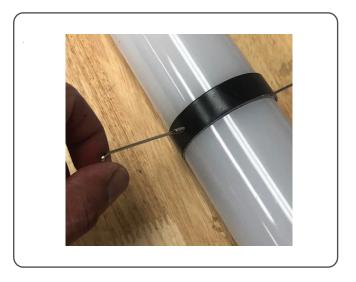

## Step 7

After assembling the first joiner, take another piece of the channel which is labelled B.

If there is no connector for this section, just repeat steps 4, 5 and 6.





