

SLC-Micron-102S

Diffusion LED Channel



Safety Instruction and Warning

WARNING:

READ CAREFULLY BEFORE INSTALLING.

Installation should only be performed by a qualified electrician in accordance with NEC and all applicable local building codes.

Risk of fire or electric shock. Fixture installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.


Ensure that electrical power is turned OFF before and during installation or maintenance.

Fixtures must be connected to a wiring system that includes an equipment-grounding conductor.

Ensure that the supply voltage matches the rated voltage of the luminaire fixture.

Wear gloves and safety glasses at all times when removing the luminaire from the carton, installing, servicing, or performing maintenance.


Diagram

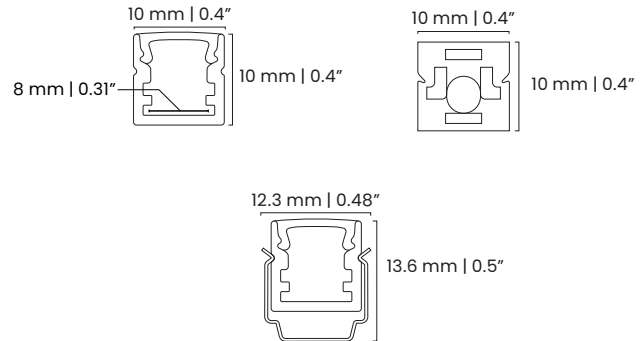

Description

Narrow 10 mm anodized aluminum channel that comes complete with mounting hardware, two grey end caps, and an extra thick opal polycarbonate lens for zero dotting.

Shop Drawing

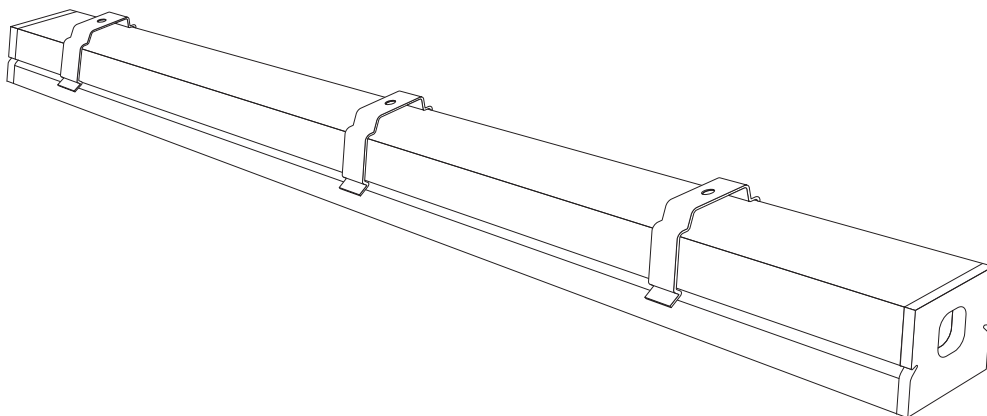


SLC-Micron-102S

Diffusion LED Channel



Installation Types

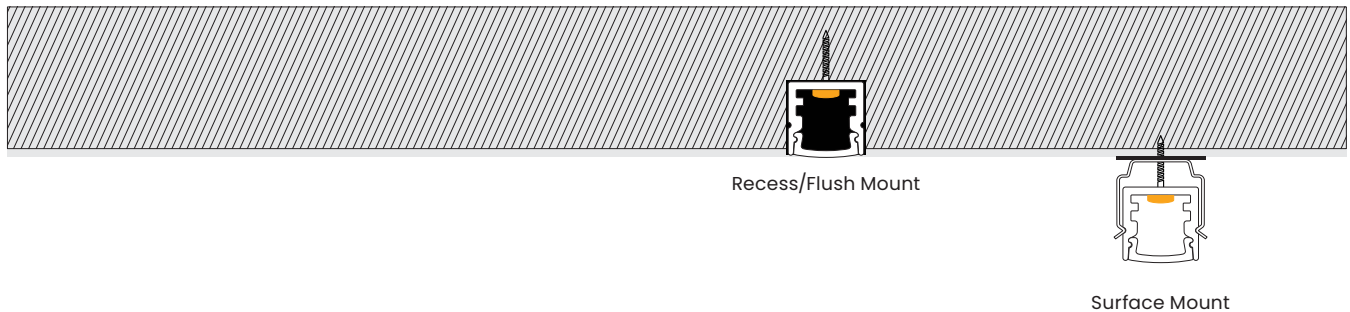

Notes:

****Fixture should be built and installed based around the lengths of ribbon and power feed locations.****

****Installing a lens on micron channels can be difficult and may require patience.****



Step 1

Determine ribbon length and channel length, cutting to desired lengths as required.

You can cut the channel and lens at the same time to ensure they line up and are the same length.

For fixture length that is more than 8 feet refer to Page 5.

Instruction (Surface Mount, Less than 8ft)

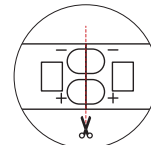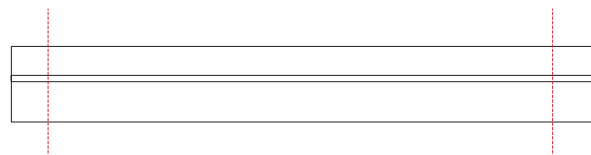


SLC-Micron-102S

Diffusion LED Channel




Step 2

Install mounting clips on the desired surface in a straight line. Ensuring straight lines using a laser, chalk line, or jig.

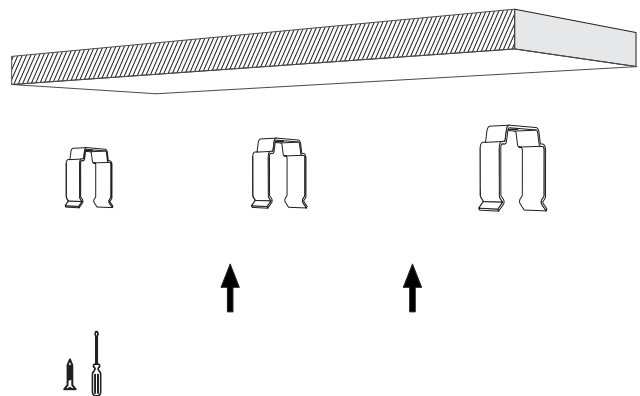

Step 3

Install ribbon using pre-cut pieces or adaptors, ensuring power feed is at the appropriate end. Peel off the 3M double-sided tape and stick it to the inside of the channel.

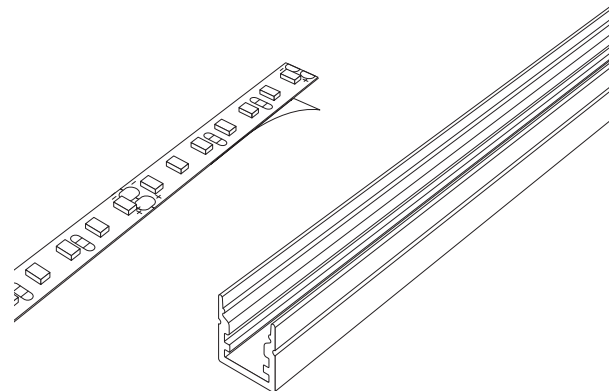


SLC-Micron-102S

Diffusion LED Channel




Step 4

Securely install the lens and endcaps, making sure they fit snugly and fully engage with the channel. Confirm the power feed endcap is at the appropriate end.

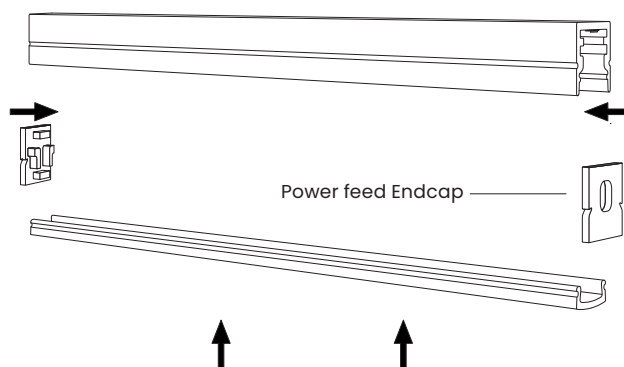

Step 5

Snap the finished fixture firmly into the mounting clips until it's securely seated
Finished!

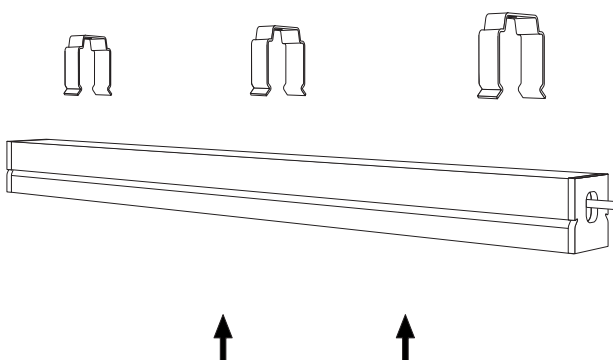

SLC-Micron-102S

Diffusion LED Channel




Step 1

Determine the desired length for your ribbon and channel.

For the best results, cut the channel and lens together to ensure they are aligned and equal in length.

If a corner is needed, cut angles into the ends of the channel (e.g., two 45-degree cuts to create a 90-degree turn).


Instruction (Recess/ Flush Mount, More than 8ft)

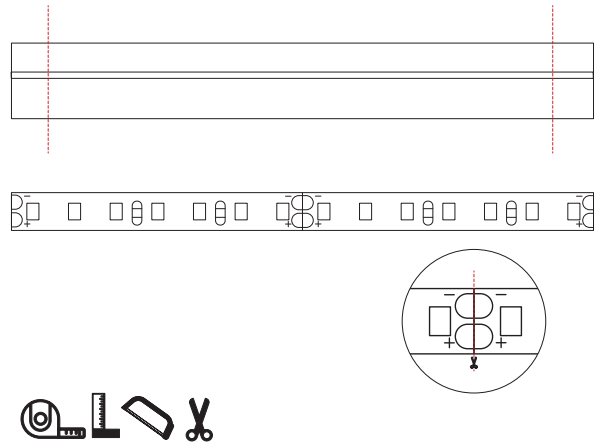

Step 2

Install mounting clips on the desired surface in a straight line. Ensuring straight lines using a laser, chalk line, or jig.

install channel pieces, making sure the entire run is straight and all seams, edges, and joints line up tightly.

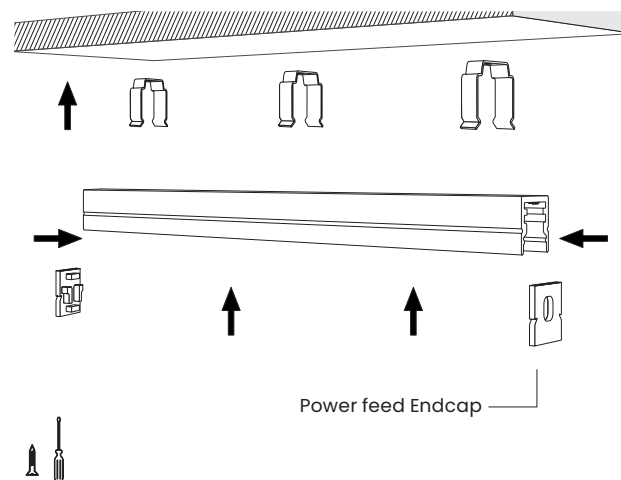

SLC-Micron-102S

Diffusion LED Channel




Step 3

For recessed or flush mount applications, secure the channel using either construction adhesive or by predrilling countersunk holes and fastening with appropriate screws.


If feeding power from the bottom of the fixture, drill a 7/32" (5.5mm) hole in the channel at the desired power connection point prior to installing the ribbon.

Install the channel, ensuring the entire run is straight and all seams, edges, and joints line up tightly. Then, install the endcaps, making sure the power feed endcap is at the appropriate end.

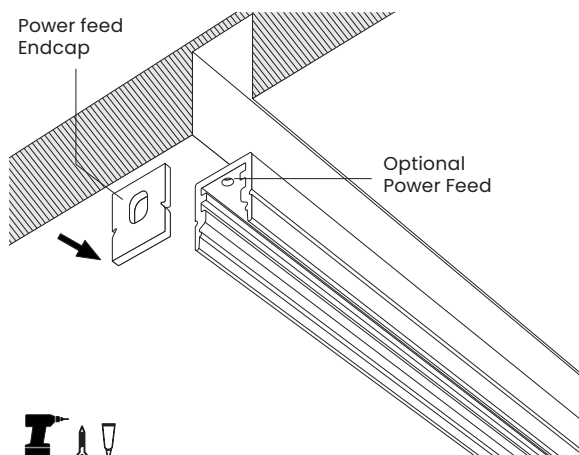

Step 4

Install ribbon using pre-cut pieces or adaptors, ensuring power feed is at the appropriate end. Peel off the 3M double-sided tape and stick it to the inside of the channel.

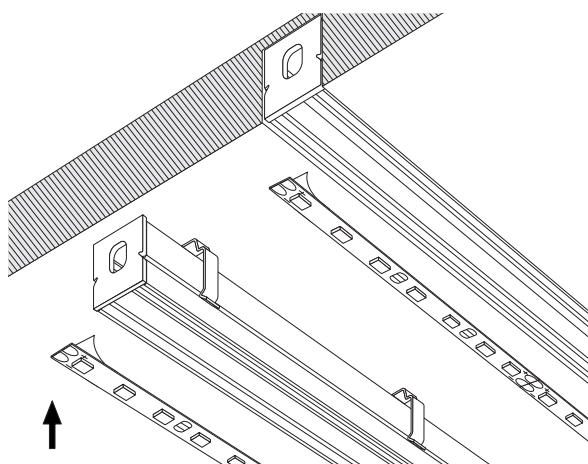

SLC-Micron-102S

Diffusion LED Channel



Step 5

Test the fixture and install the lens by snapping it into place, starting at one end and working down the length of the fixture.

Finished!

