

WC-2-SG-(WH/BK/NK)

Diffusion Accessories

Safety Instruction and Warning

WARNING:

READ CAREFULLY BEFORE INSTALLING.

Installation should only be conducted by a qualified electrician in accordance with NEC and any relevant local building codes.

Risk of fire or electric shock. Fixture installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.


Be certain electrical power is OFF before and during installation and maintenance.

Fixtures must be connected to a wiring system with an equipment-grounding conductor.

Make sure the supply voltage is the same as the rated luminaire Fixtures voltage.

Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.


Diagram

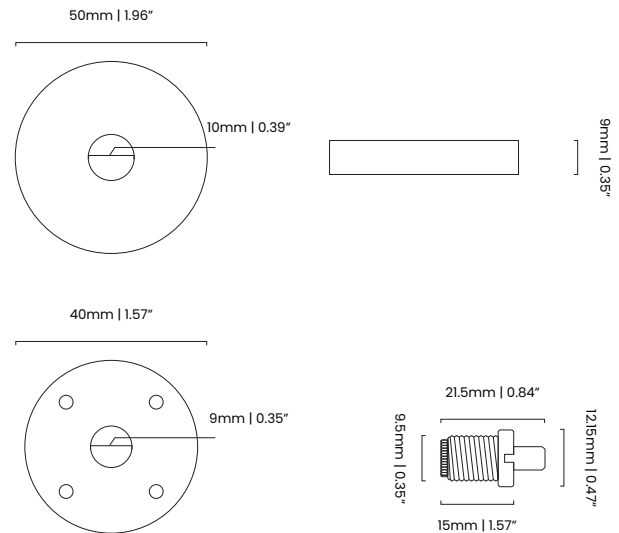

Description

The Diffusion WC-2-SG-(WH/BK/NK) is an accessory for suspending Diffusion pendant fixtures. Featuring a modern and sleek design, it is suitable for both residential and commercial lighting projects.

Wooden Ceiling Kit

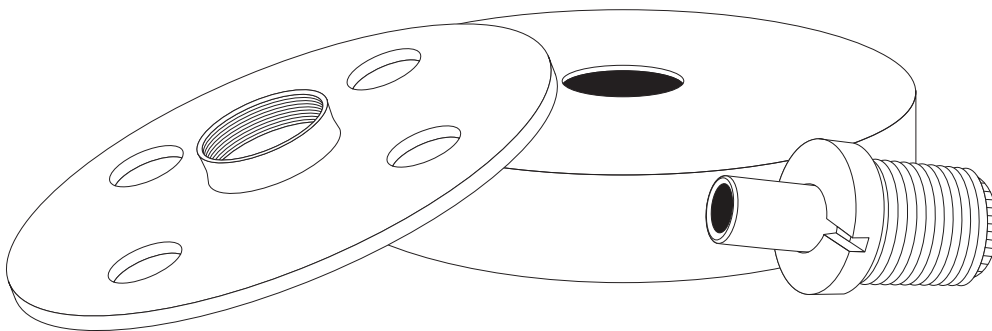


WC-2-SG-(WH/BK/NK)

Diffusion Accessories


Step 1

Make sure the hole on the wooden Ceiling is between 10mm to 15mm.

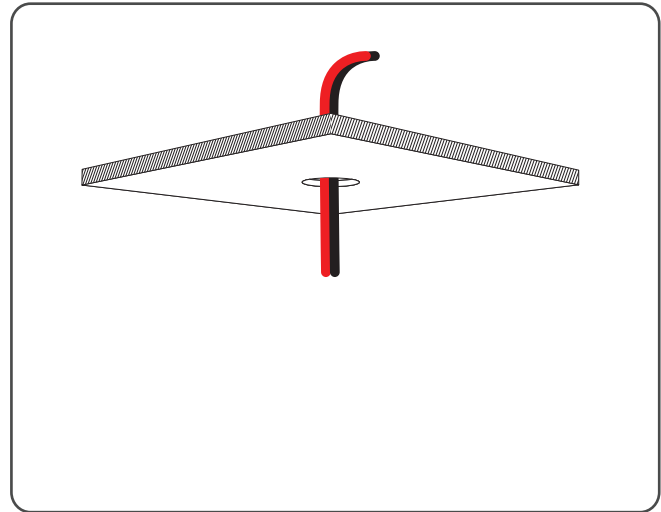

Step 2

Use four Screws to screw the circle mounting on the surface. Make sure to line up the Surface's hole and mounting's hole.

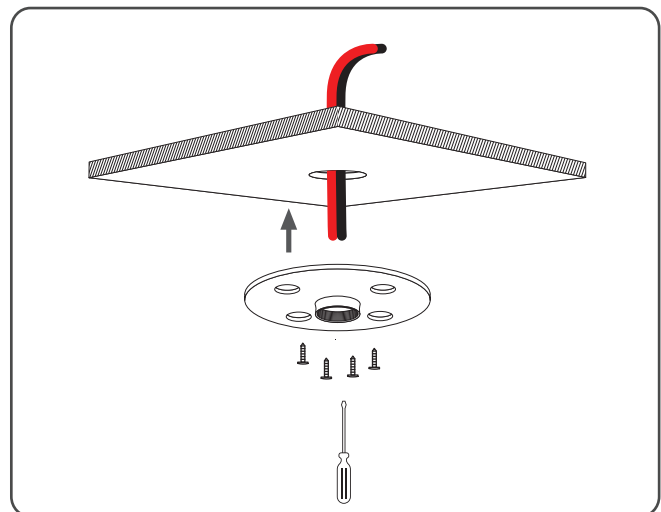


WC-2-SG-(WH/BK/NK)

Diffusion Accessories

Step 3

Insert the Suspension Power Cable into the Gripper.


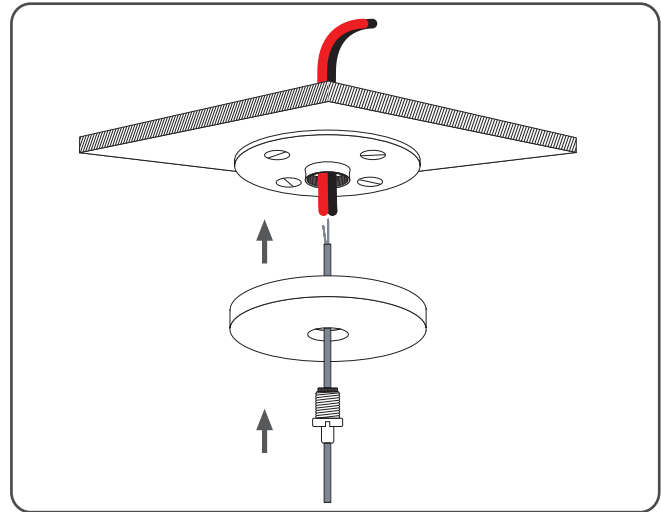


Step 4

Put the 2" canopy on the circle mounting and screw the gripper into it.

To adjust the suspension power cable, release the gripper by pushing the nub (A) while pulling the cable in the opposite direction.

Make sure that the cable is not pinched or damaged in any way.

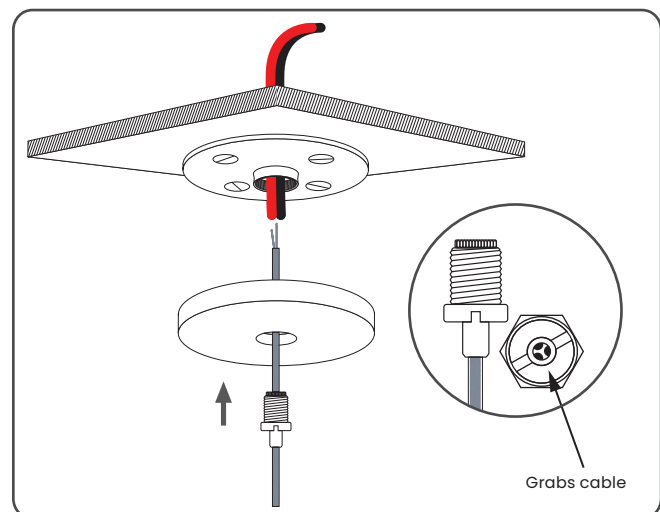

WC-2-SG-(WH/BK/NK)

Diffusion Accessories

Step 5

Fasten the screw to make sure that the kit is firmly attached to the surface.

