

WC-2-SG-(WH/BK/NK)

Diffusion Accessories



Safety Instruction and Warning

WARNING:

READ CAREFULLY BEFORE INSTALLING.

Installation should only be performed by a qualified electrician in accordance with NEC and all applicable local building codes.

Risk of fire or electric shock. Fixture installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.


Ensure that electrical power is turned OFF before and during installation or maintenance.

Fixtures must be connected to a wiring system that includes an equipment-grounding conductor.

Ensure that the supply voltage matches the rated voltage of the luminaire fixture.

Wear gloves and safety glasses at all times when removing the luminaire from the carton, installing, servicing, or performing maintenance.


Diagram

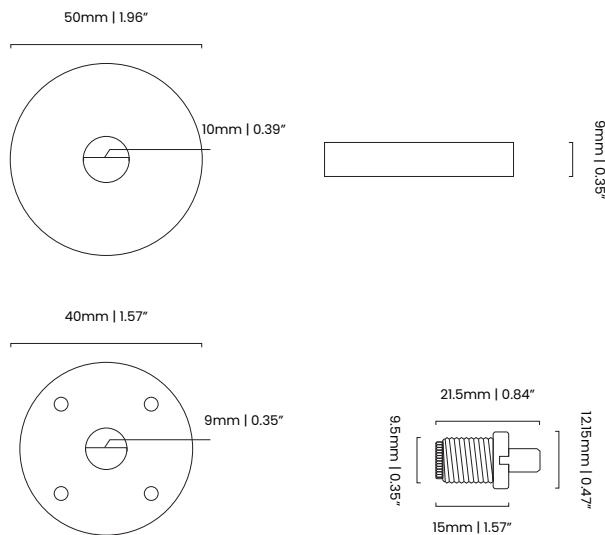

Description

The Diffusion WC-2-SG-(WH/BK/NK) is an accessory for suspending Diffusion pendant fixtures. Featuring a modern and sleek design, it is suitable for both residential and commercial lighting projects.

Wooden Ceiling Kit

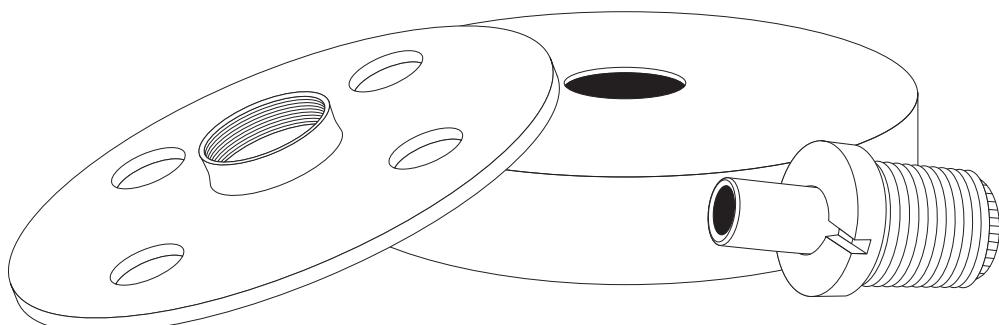


WC-2-SG-(WH/BK/NK)

Diffusion Accessories




Step 1

Make sure the hole on the wooden Ceiling is between 10mm to 15mm.

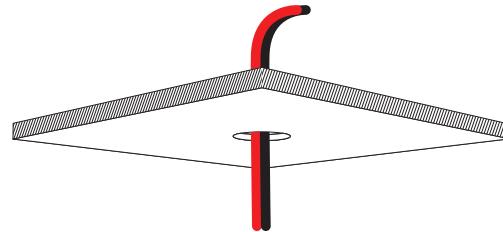

Step 2

Use four Screws to screw the circle mounting on the surface. Make sure to line up the Surface's hole and mounting's hole.

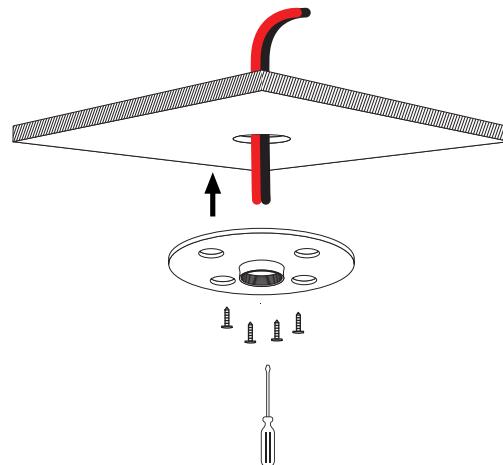


WC-2-SG-(WH/BK/NK)

Diffusion Accessories



Step 3

Insert the Suspension Power Cable into the Gripper.


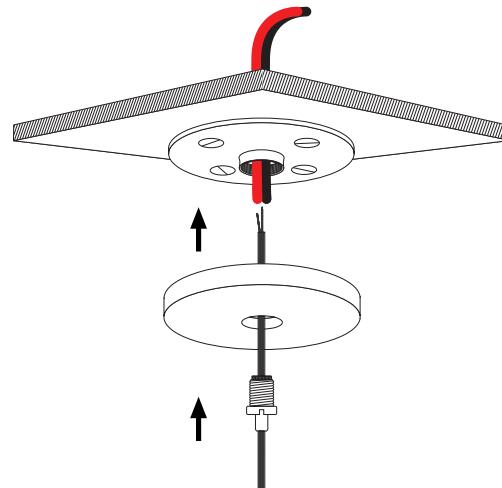


Step 4

Put the 2" canopy on the circle mounting and screw the gripper into it.

To adjust the suspension power cable, release the gripper by pushing the nub (A) while pulling the cable in the opposite direction.

Make sure that the cable is not pinched or damaged in any way.

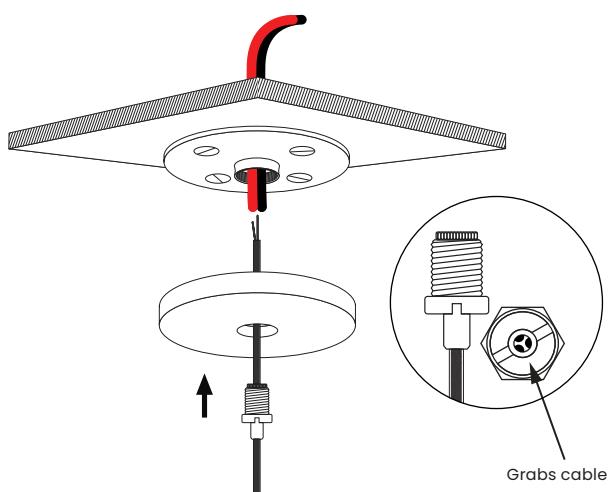

WC-2-SG-(WH/BK/NK)

Diffusion Accessories



Step 5

Fasten the screw to make sure that the kit is firmly attached to the surface.

